

# Calibrating And Updating

- [Updating AIR-1 Firmware](#)
- [CO2 Calibration For AIR-1](#)
- [AIR-1 Temperature Calibration](#)

# Updating AIR-1 Firmware

Please refer to the [general firmware update](#) article

# CO2 Calibration For AIR-1

Please refer to the [general CO2 calibration](#) article

# AIR-1 Temperature Calibration

The AIR-1 uses the SEN55 for its temperature reading. Calibrating it to your environment is very similar to the MSR-1. See the link below for the temperature calibration guide.

## **[Temperature Calibration Guide](#)**

**[AIR-1 Temperature Offset.png](#)**

Image not found or type unknown

**[AIR-1 Temperature Offset 2.png](#)**

Image not found or type unknown