

Putting The AIR-1 In Boot Mode

This will cover how to put the AIR-1 into boot mode. This is sometimes needed for uploading new firmware if the device is struggling.

Boot Button Only

1. Plug in the device
2. See the photo below to help access the boot button through the back of the case
3. Use a pin to press and hold the boot button, while holding the boot button plug it back into your computer/power and then release the boot button
4. Continue with [Uploading your Code via our ESPHome Web Flasher](#)

Boot and Reset Button

1. Plug it into your computer
2. Press and hold the boot button, while holding it press and release the reset button, then release the boot button
3. Continue with [Uploading your Code via our ESPHome Web Flasher](#)

[AIR-1 Boot Reset Red.png](#)

Revision #7

Created 5 December 2023 05:36:52 by justin@apolloautomation.cloud

Updated 23 August 2024 20:57:19 by SmartHomeSellout