


Reset Wi-Fi Credentials

1. Plug the device into power
2. Long press the Boot button for 10 seconds
A small red square button with the text "AIR-1 Boot-Reset-Red.png" above it.
3. The Wi-Fi credentials should be reset and it will broadcast its hotspot again

Revision #8

Created 18 March 2024 18:49:57 by justin@apolloautomation.cloud

Updated 16 May 2024 19:11:59 by justin@apolloautomation.cloud