

# Adding CO2 To MSR-1

<https://www.youtube.com/embed/gxVCZyOQjJs?si=-b2uhOKwxXw6DswV>

1. Unplug your MSR-1 from power and remove the back

[IMG\\_3784.jpeg](#)  
Image not found type unknown

2. Remove the board from the case and orientate it like the below image. In the bottom right there is a black connector. There is a x in the lower right corner of the connector

[IMG\\_3788.jpeg](#)  
Image not found type unknown

3. Orientate the CO2 module so the white x on the module is also in the lower right and the gold dot is in the upper left as seen below

[IMG\\_3787.jpeg](#)  
Image not found type unknown

4. Align the connector on the back of the CO2 module with the connector on the MSR-1. Once aligned, push down so the CO2 module fully seats itself

[IMG\\_3789.jpeg](#)  
Image not found type unknown

5. Put your MSR-1 back in the case and slide the back cover on. Please refer to our [CO2 calibration guide](#) to calibrate the CO2 module.

---

Revision #6

Created 27 December 2023 01:25:58 by Trevor

Updated 19 February 2024 02:40:31 by justin@apolloautomation.cloud