

Putting The MSR-1 In Boot Mode

This will cover how to put the MSR-1 into boot mode. Sometimes, this is needed to upload new firmware if the device is struggling.

Boot Button Only

1. Plug in the device
2. See the photo below to help access the boot button through the top of the case
3. Use a pin to press and hold the boot button, while holding the boot button plug it back into your computer/power and then release the boot button

[MSR-1 Top Shot Boot Button.jpg](#)

4. Continue with [uploading the firmware document](#)

Boot and Reset Buttons

1. Unplug the device
2. Slide the back of the case off
3. Remove the device from the case
4. Plug it back into your computer
5. Press and hold the boot button, while holding it press and release the reset button, then release the boot button

[MSR-1_Buttons.jpg](#)

6. Continue with [uploading the firmware document](#)

Revision #4

Created 28 November 2023 06:26:00 by justin@apolloautomation.cloud

Updated 6 August 2024 13:39:04 by justin@apolloautomation.cloud